



22743 Freeport Road
Sterling, IL 61081

Item #136-WHT & 136-BLK


Kinze 1050 Tarp Kit

Rev 012411

Caution: Small Parts. Not recommended for children under 12 yrs of age. Use Care when handling – sharp edges. Use of this item in its intended purpose may violate the safety standards of the original item for which it is intended to be used with.

This kit includes enough parts to assemble one tarp on a Spec Cast Kinze 1050.

First, decide which style of tarp you wish to have: Aluminum end caps, shown at right, in orange, or tarped ends, shown on the left, in white. Notice that depending on the end configuration, the bow arrangement is different. Red bows have tarp cradles, blue bows do not.

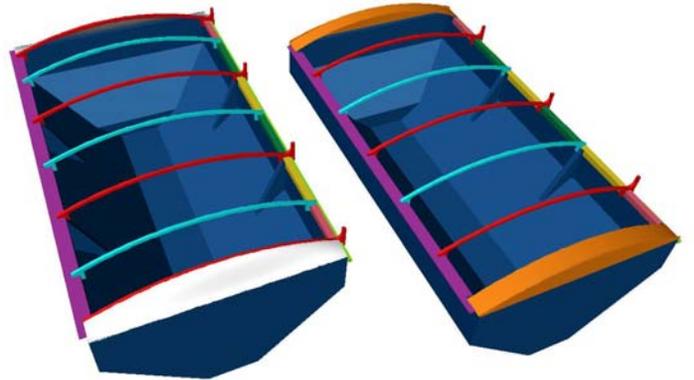

Form and install the bow placement guides. The long piece goes on the right side of the cart, and acts as a tarp roll over trough. The short pieces are applied to the left side, and assist in placing and retaining the bows:



Next, install the bows. Use the top illustration as a guide for placement. After bows are placed, slide long rod (with out eyelet) through the openings on the "red" bows. This is the simulated fixed tarp rod. Then determine desired location of crank handle rest.

Two different lengths are included in kit. Note that the longer part has the bend lines in the wrong place. Bends should be next to center hole. Drill #71 holes through back of cart and glue bracket in place.



Studs are included for the axle assemblies on the row crop models. Glue these in place as shown, on both front and rear.

Determine how the tarp will be displayed. The tarp material must be trimmed on the fixed side to fit between the cradles, and wrap around and tuck under the fixed side rod. If the tarp will be displayed shut, roll the tarp around the handle rod and tuck under the roll over trough. Glue in place as necessary. If the tarp will be displayed open, two separate pieces of tarp material are needed. Stick one portion on the bows, cut to the width desired. Roll the second piece on the tarp rod, then glue on the edge of the portion that lays on the bows to create the appearance of a single piece. If you are making tarped ends, do these first. Stick a small piece on each end, carefully aligning the edge of the tarp to the first bow, and pressing down firmly on all edges. With a NEW Exacto Knife blade, trim off the excess around the cart.